



20cm Reference

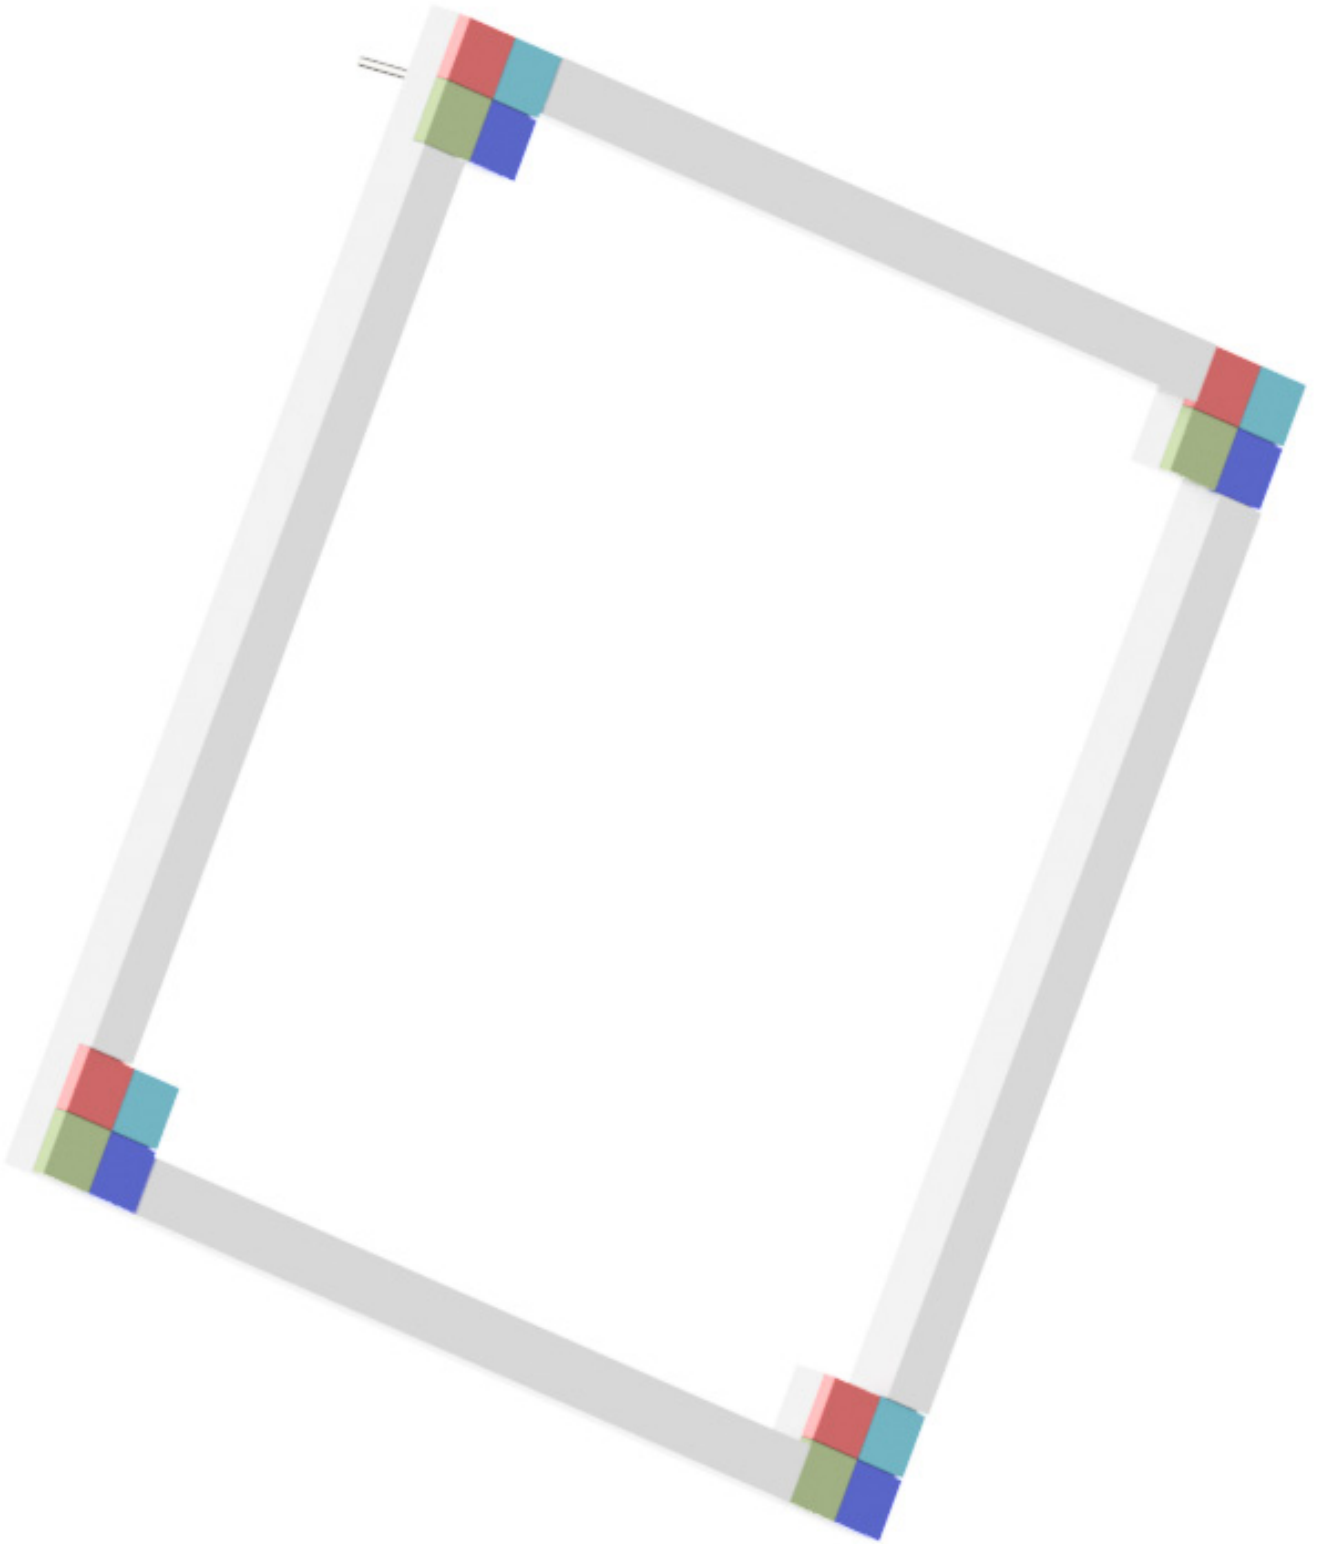

•• **Assembly Instructions** ••


Spare parts

3D printed parts

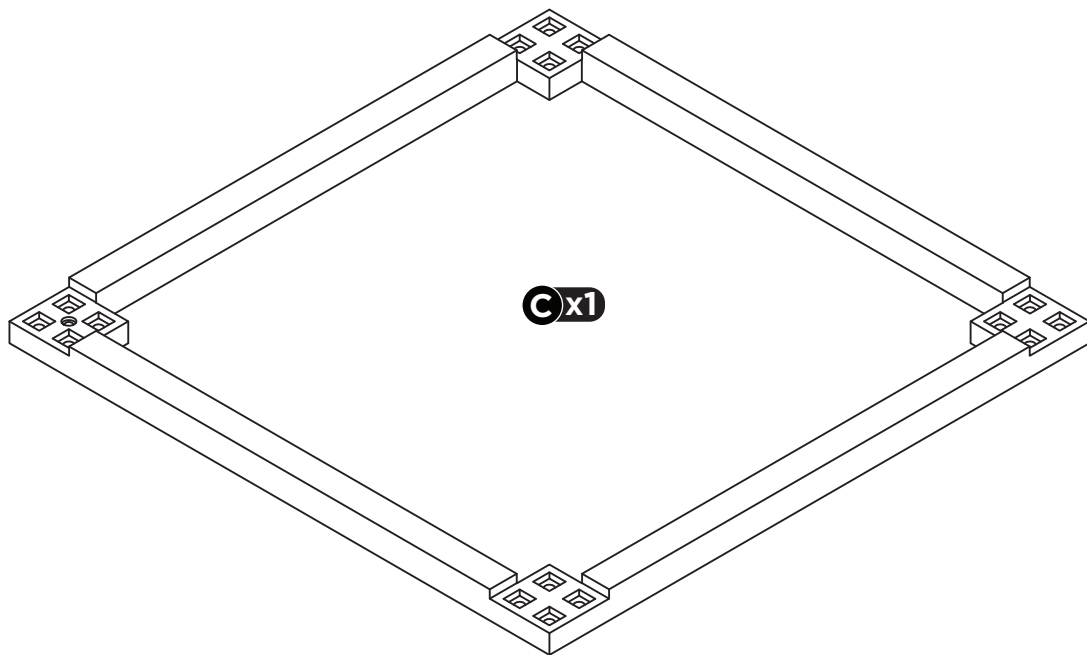


To buy in any DIY/Hardware shop

H x1 Stainless steel nail

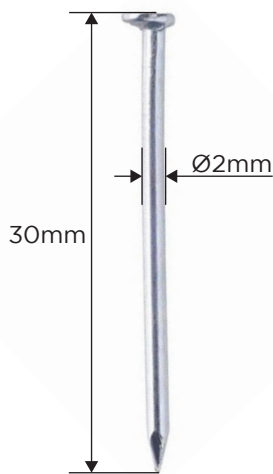


J x16 Stainless steel round headed screw

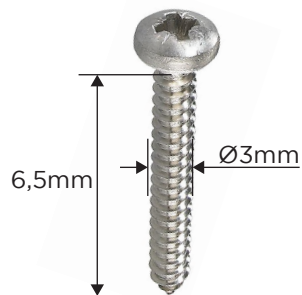


K x1 Screwdriver



Step 1



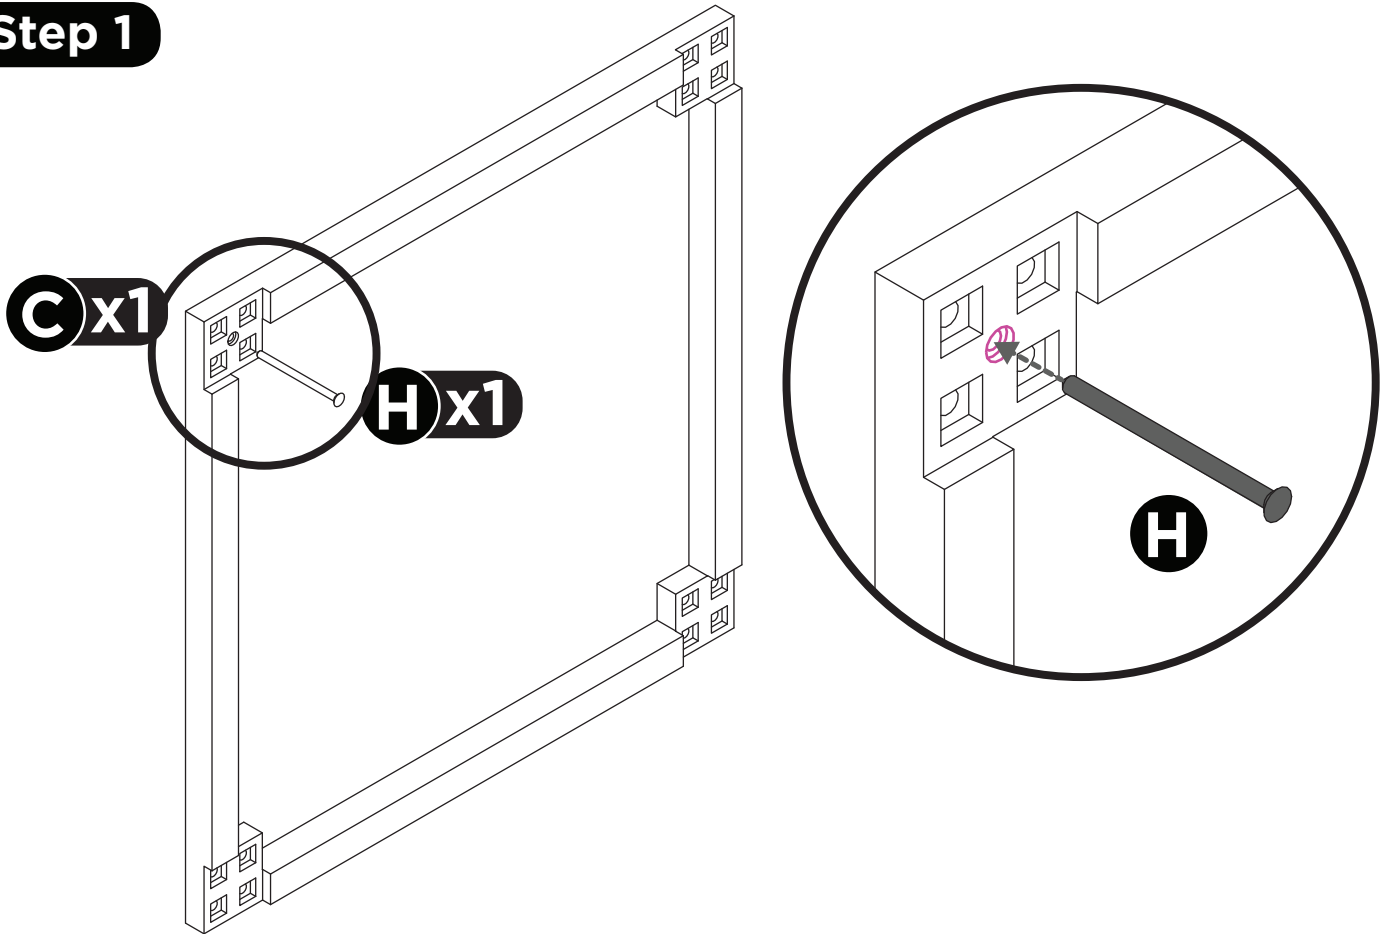


Step 2

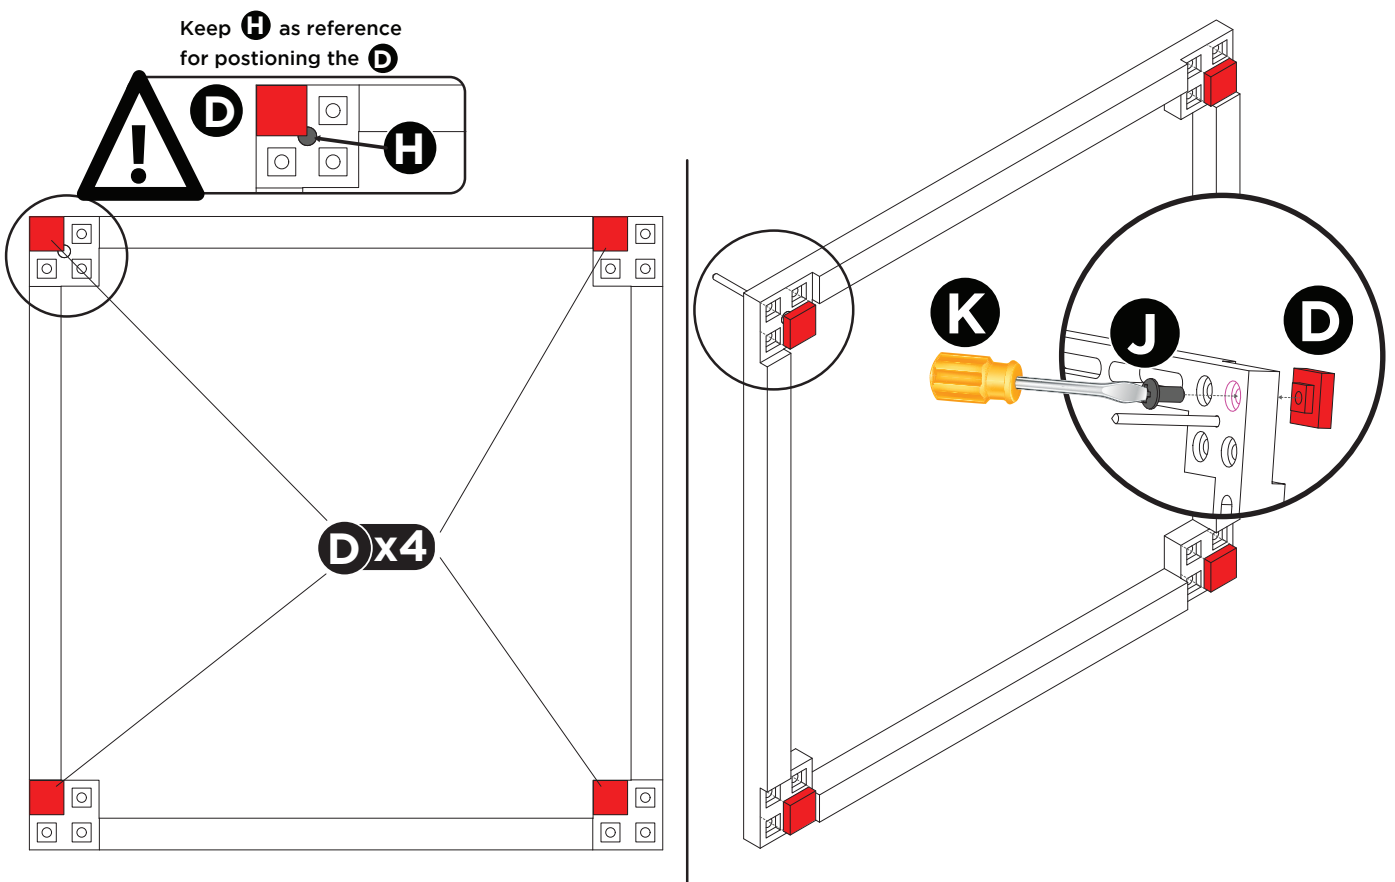




Step 3

Keep **D** as reference for positioning the **E**

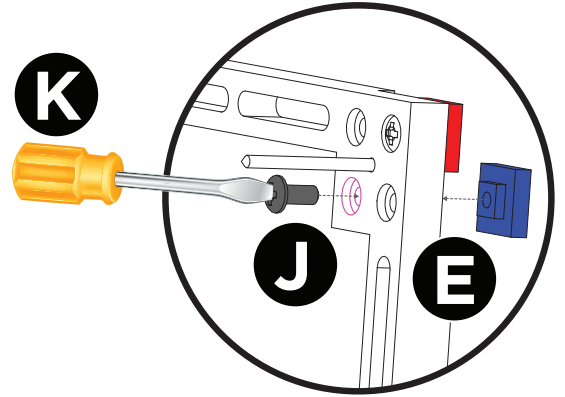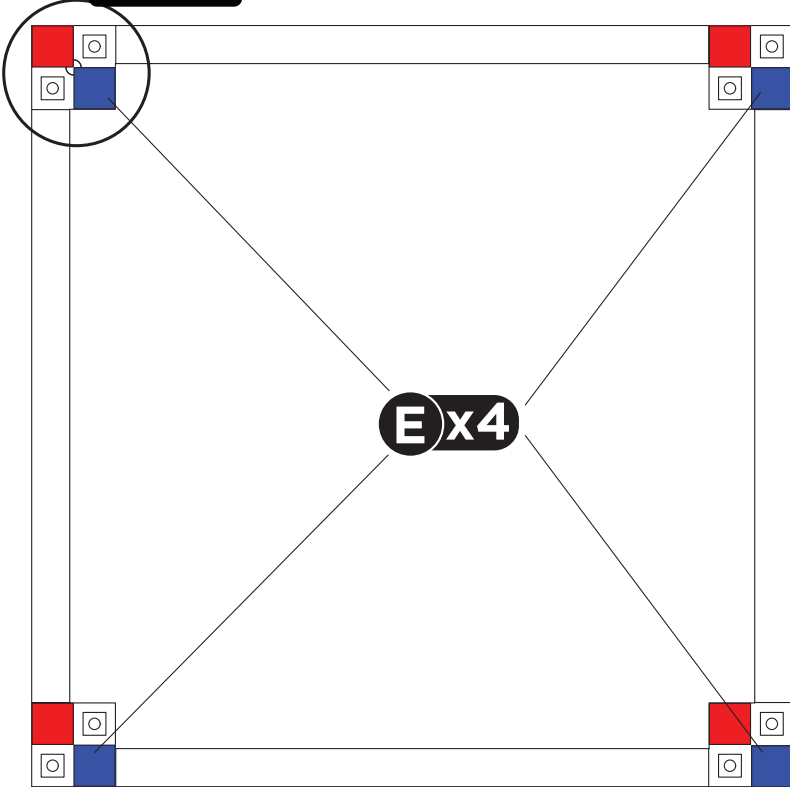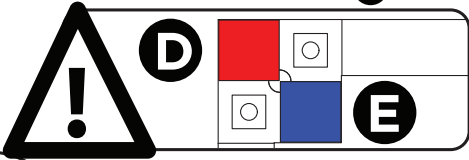


Step 4

Keep **E** as reference for positioning the **F**

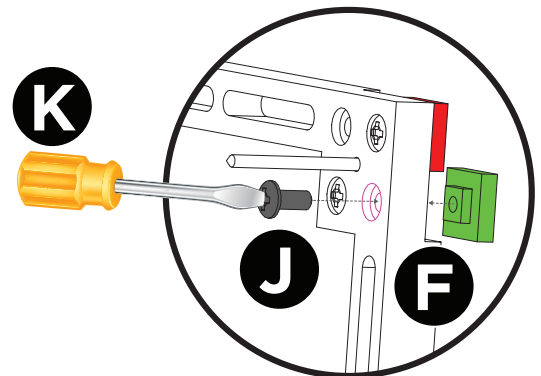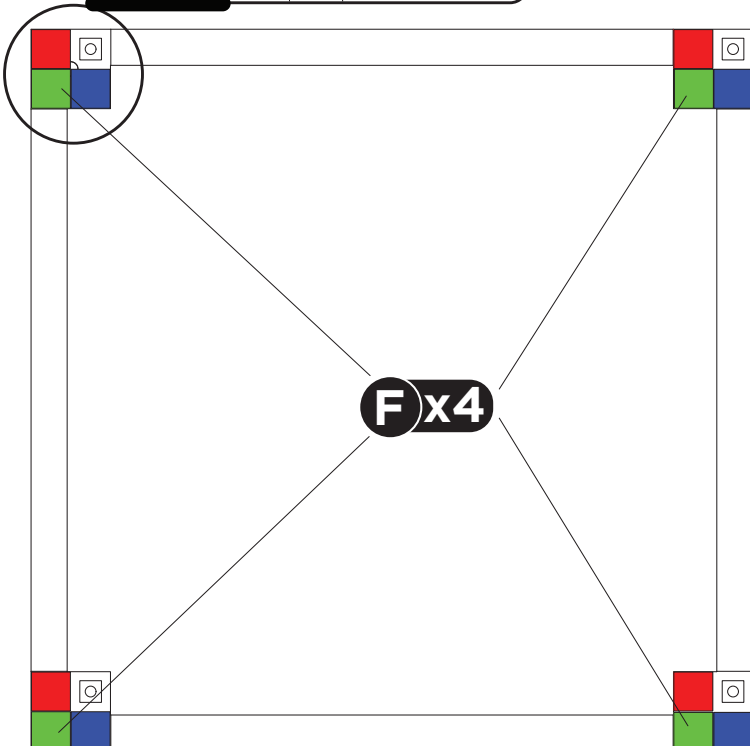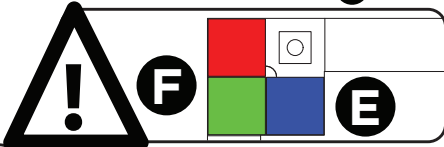


Step 5

Keep **F** as reference
for positioning the **G**

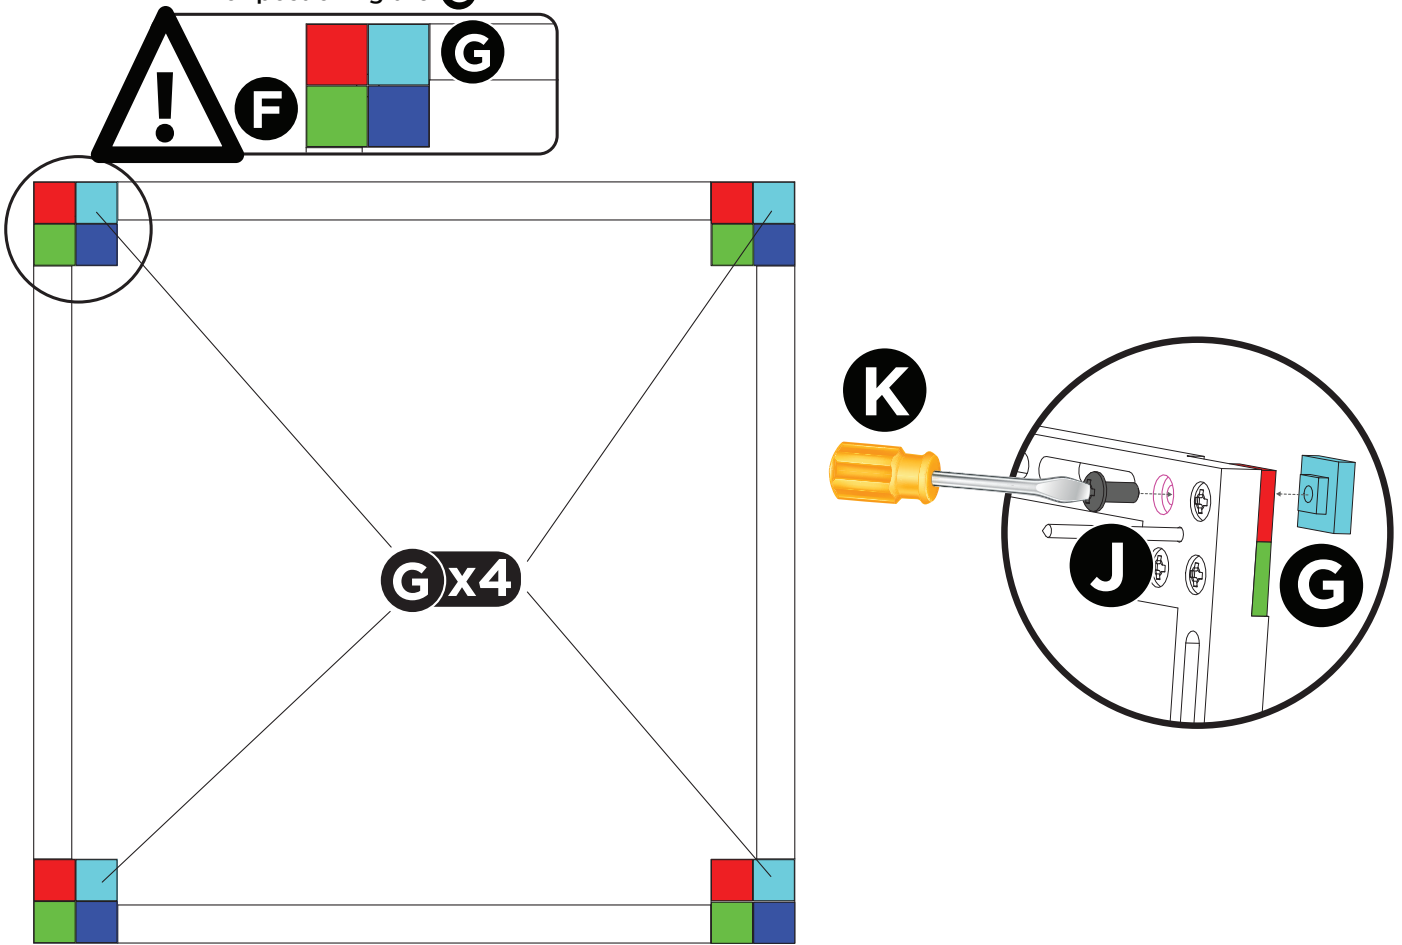

Step 6

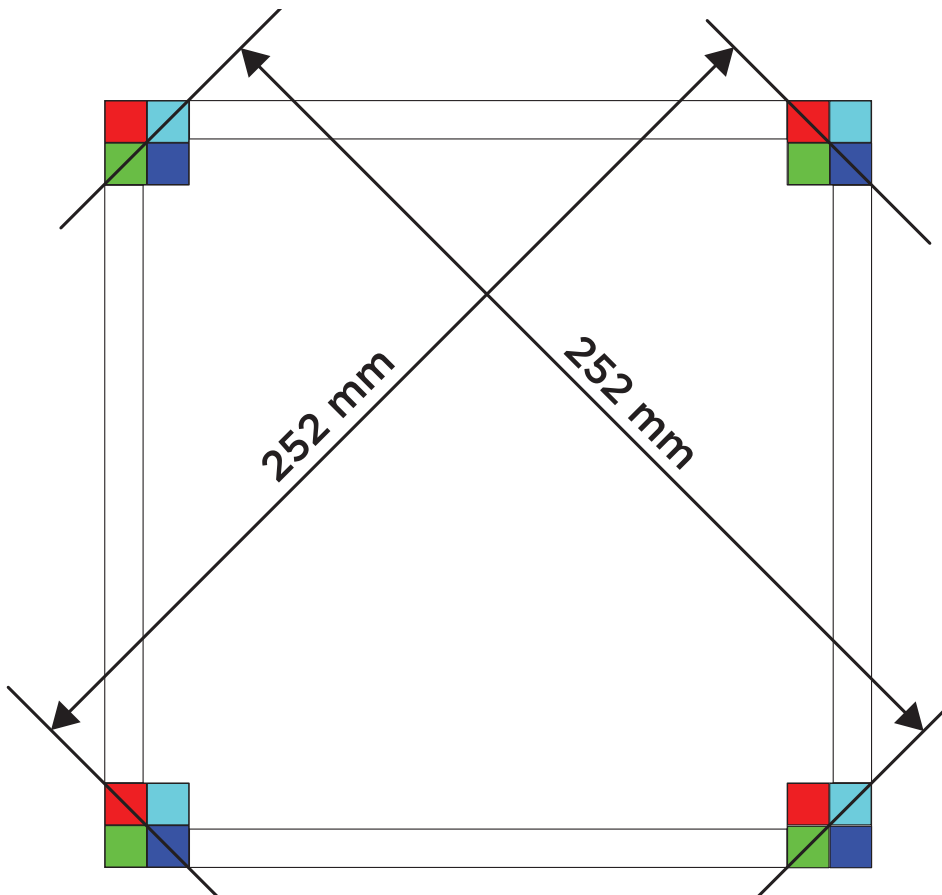

Final

Keep in mind: when placing the reference on the bundle, all corners should have the red color at the top.

